



Roof *Airtight on the inside*

Circular penetration

1




- Crease Rissan lengthwise

2



- Apply Rissan half to the pipe and half to the the vapour control layer without tension

3

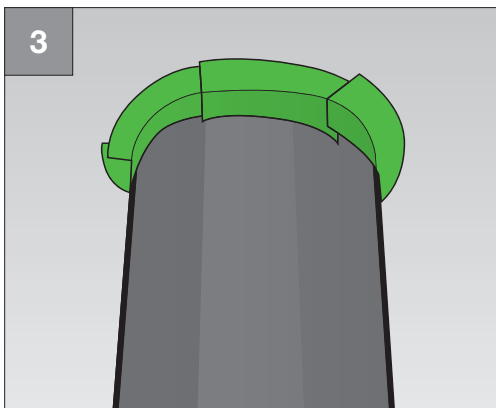

- Apply Rissan around circular parts in layers

4



How it should look:

- The circular penetration is airtightly sealed with layers of Rissan 60

**Tips and tricks**

- For short pieces, separate Rissan from its backing strip
- Pull on Rissan and the backing strip simultaneously
- Block Rissan roll with one hand
- Use other hand to tear off Rissan over blade with a quick jerking movement

**Rissan® 60**

P. 120